



# Configuring the Cisco IOS Auto-Upgrade Manager

---

**First Published: June 28, 2007**

**Last Updated: June 28, 2007**

The Cisco IOS Auto-Upgrade Manager (AUM) feature simplifies the software image upgrade process by providing a simple interface to specify, download, and upgrade a new Cisco IOS image.

You can upgrade to a new Cisco IOS image in interactive mode by allowing the Auto-Upgrade Manager to guide you through the process. Alternatively, you can perform the upgrade by issuing a single Cisco IOS command or a series of commands. All three methods utilize the Warm Upgrade functionality to perform the upgrade and minimize downtime.

## **Finding Feature Information in This Module**

Your Cisco IOS software release may not support all of the features documented in this module. To reach links to specific feature documentation in this module and to see a list of the releases in which each feature is supported, use the [“Feature Information for Cisco IOS Auto-Upgrade Manager”](#) section on page 13.

## **Finding Support Information for Platforms and Cisco IOS and Catalyst OS Software Images**

Use Cisco Feature Navigator to find information about platform support and Cisco IOS and Catalyst OS software image support. To access Cisco Feature Navigator, go to <http://www.cisco.com/go/cfn>. An account on Cisco.com is not required.

## Contents

- [Prerequisites for Cisco IOS Auto-Upgrade Manager, page 2](#)
- [Restrictions for Cisco IOS Auto-Upgrade Manager, page 2](#)
- [Information About Cisco IOS Auto-Upgrade Manager, page 2](#)
- [How to Upgrade a Cisco IOS Software Image Using the Cisco IOS Auto-Upgrade Manager, page 5](#)
- [Configuration Examples for Cisco IOS Auto-Upgrade Manager, page 10](#)
- [Additional References, page 11](#)



---

**Americas Headquarters:**  
**Cisco Systems, Inc., 170 West Tasman Drive, San Jose, CA 95134-1706 USA**

© 2007 Cisco Systems, Inc. All rights reserved.

- [Feature Information for Cisco IOS Auto-Upgrade Manager, page 13](#)
- [Glossary, page 14](#)

## Prerequisites for Cisco IOS Auto-Upgrade Manager

- You must configure the DNS server IP address on the router for a download from Cisco. For more details, refer to the “[Configuring the DNS Server IP Address: Example](#)” section on page 10 and the “[Related Documents](#)” section on page 12.
- You must configure the Secure Socket Layer (SSL) certificate from the Cisco website on the router for a download from Cisco. This configuration is not required for a download from a non-Cisco server. For more details, refer to the “[Configuring the SSL Certificate for a Cisco Download](#)” section on page 5 and the “[Related Documents](#)” section on page 12.
- You must register with Cisco Systems for cryptographic software download if you want to download cryptographic Cisco IOS software images.

## Restrictions for Cisco IOS Auto-Upgrade Manager

The Cisco IOS Auto-Upgrade Manager will not run to completion if the router does not have sufficient memory resource to load and store the requested Cisco IOS software image. The Cisco IOS software image can be downloaded from [www.cisco.com](http://www.cisco.com) only if the current Cisco IOS software image running in the router is a cryptographic image.

## Information About Cisco IOS Auto-Upgrade Manager

To use the Cisco IOS Auto-Upgrade Manager, you should understand the following concepts:

- [Cisco IOS Auto-Upgrade Manager Overview, page 2](#)
- [Downloading a Specific Cisco IOS Software Image from the Cisco Website, page 4](#)
- [Downloading a Specific Cisco IOS Software Image from a Non-Cisco Server, page 4](#)
- [Using the Interactive and Single Command Line Mode, page 5](#)

## Cisco IOS Auto-Upgrade Manager Overview

The Cisco IOS Auto-Upgrade Manager streamlines the process of upgrading to a new Cisco IOS software image. You can run the Cisco IOS Auto-Upgrade Manager through the command-line interface (CLI). AUM enables the router to connect to the Cisco website ([www.cisco.com](http://www.cisco.com)) and send the [cisco.com](http://www.cisco.com) username and password for authentication. After authentication, the router passes the name of the Cisco IOS software image that is specified by the user to the Cisco server. The Cisco server returns the complete URL of the Cisco IOS software image to the router.


The Cisco IOS Auto-Upgrade Manager configured on the router can then manage the entire process of upgrading to the Cisco IOS software image. AUM upgrades the router with the software image at the time specified by the user, by performing the following tasks:

- Locating and downloading the Cisco IOS software image
- Checking all requirements

- Managing secondary storage space
- Validating the Cisco IOS software image
- Scheduling a warm-upgrade

Figure 1 illustrates the workflow of the Cisco IOS Auto-Upgrade Manager:

**Figure 1 Cisco IOS Auto-Upgrade Manager Workflow**

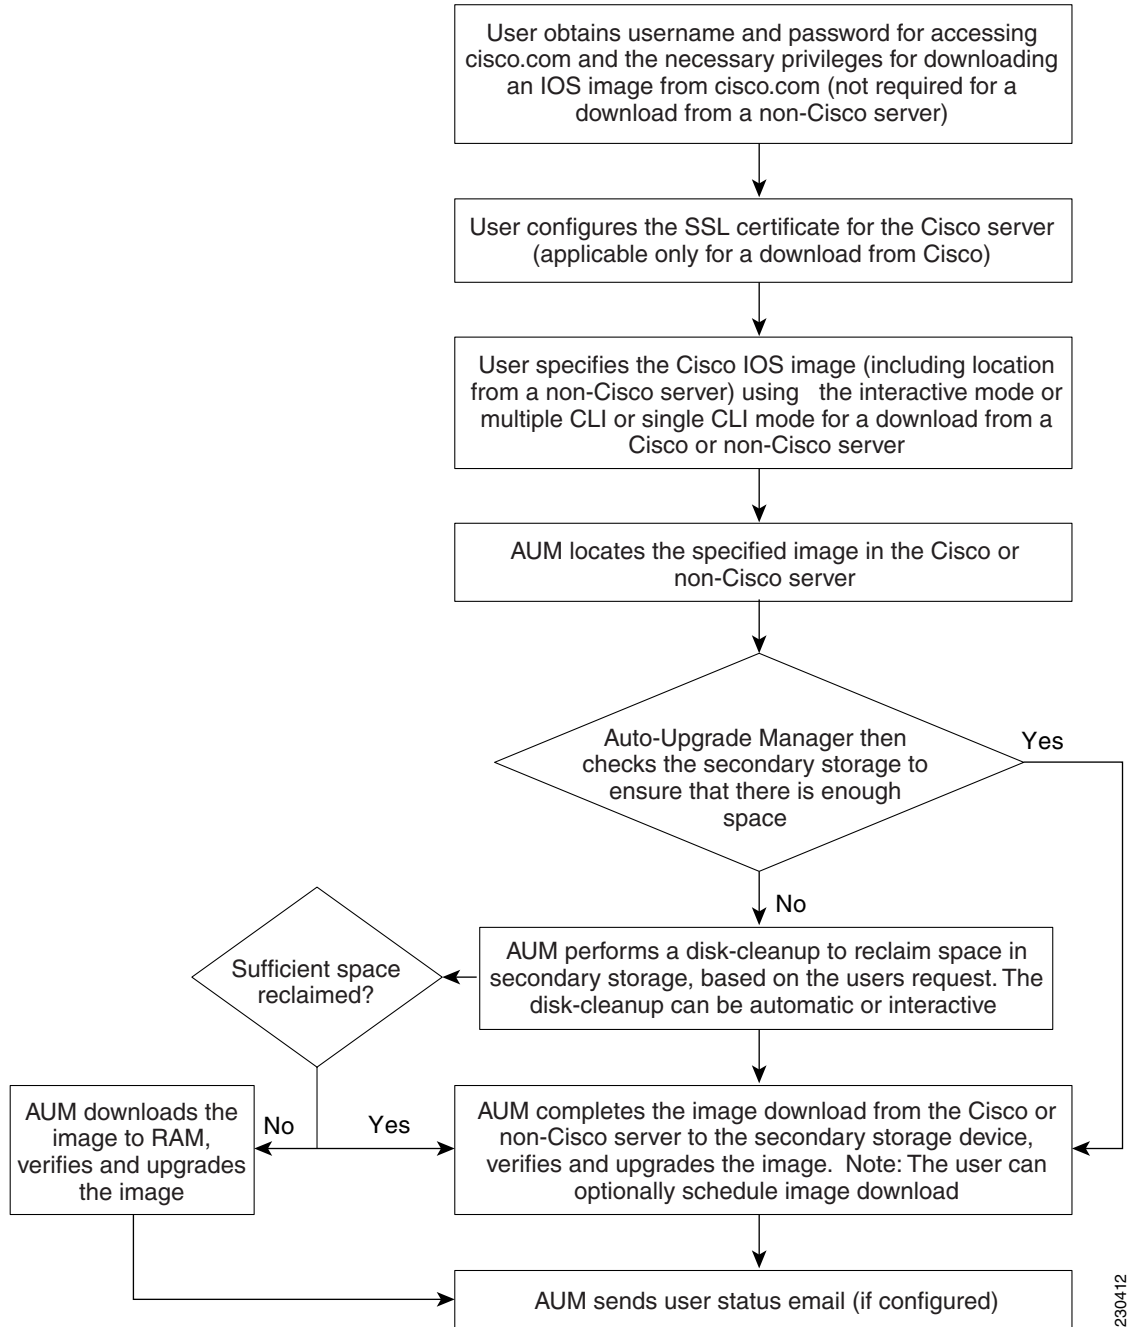

230412

**Note**

---

If the router fails to load the Cisco IOS software image that you have specified, it displays the error message in the console window and in the syslog buffers indicating the reason for the failure. If the user is not authorized to download encrypted software, an error message is generated requesting the user to register for this service.

Similarly, if any CLI configuration statements are not understood by the parser at bootup, it generates an error message and stores the log of the invalid configuration lines in the nvram:invalid-config file. This error message indicates that the Cisco IOS software image that you have specified does not support the same feature set as the old Cisco IOS software image.

If the router does not have sufficient secondary storage space to support both the images, but succeeds in the upgrade with the new image, it connects to the Cisco server again and downloads the Cisco IOS software image into a secondary storage. This process erases the existing image.

---

## Downloading a Specific Cisco IOS Software Image from the Cisco Website

You can download a specific Cisco IOS software image from [www.cisco.com](http://www.cisco.com). AUM uses Secure Socket Layer (SSL) for a secure connection, requiring the user to configure the certificate. The router passes the name of the Cisco IOS software image along with your username and password to log in to the [www.cisco.com](http://www.cisco.com) server. The Cisco server returns the complete URL for the specific Cisco IOS software image to the router.

The Cisco IOS Auto-Upgrade Manager can then automatically download the Cisco IOS software image that you have specified from [www.cisco.com](http://www.cisco.com), verify it, and upgrade the router with the downloaded image.

**Note**

---

The Intelligent Download Application (IDA) is the Cisco interface to AUM and is sometimes used interchangeably with the term *Cisco server* in the context of AUM.

---

Additionally, the Cisco IOS Auto-Upgrade Manager provides the following optional services:

- Disk clean-up utility
- Scheduling of upgrade

These services are available for download from a Cisco or non-Cisco server, both in the interactive and command line modes.

## Downloading a Specific Cisco IOS Software Image from a Non-Cisco Server

You can download a Cisco IOS software image that is present on a local or non-Cisco TFTP or FTP server. You can provide an FTP username and password using the **ip ftp username** and **ip ftp password** global configuration commands for an FTP download. The Cisco IOS Auto-Upgrade Manager automates the process of downloading the specific Cisco IOS software image from a non-Cisco server and warm upgrade services. It also provides the disk clean-up utility to delete the files if the space required to download the new Cisco IOS software image is not sufficient.

## Using the Interactive and Single Command Line Mode

You can download a specific Cisco IOS software image from [www.cisco.com](http://www.cisco.com) using the CLI or through the following user interfaces:

- [Interactive Mode, page 5](#)
- [Single Command Line Mode, page 5](#)

### Interactive Mode

The Auto-Upgrade Manager guides you through the process of upgrading to a new Cisco IOS image in the interactive mode. When you choose automatic upgrade, you are required to answer a few questions in the interactive mode to complete the device upgrade. You can initiate interactive mode by issuing the **upgrade automatic** command without any options. For more details, refer to the *Cisco IOS Configuration Fundamentals Command Reference*, Release 12.4T.

### Single Command Line Mode

The non-interactive single line CLI is for advanced users. You can download and upgrade to a new Cisco IOS software image from a Cisco or non-Cisco server by using the **upgrade automatic getversion** command and specifying all the required arguments. For more details, refer to the *Cisco IOS Configuration Fundamentals Command Reference*, Release 12.4T.

The interactive mode and single line CLI mode are applicable to downloads from Cisco and non-Cisco servers.

## How to Upgrade a Cisco IOS Software Image Using the Cisco IOS Auto-Upgrade Manager

This section contains the following procedures:

- [Configuring the SSL Certificate for a Cisco Download, page 5](#) (required to download from Cisco)
- [Configuring the Cisco IOS Auto-Upgrade Manager, page 7](#) (required)
- [Downloading the Cisco IOS Software Image, page 8](#) (optional)
- [Reloading the Router with the New Cisco IOS software Image, page 9](#) (optional)
- [Canceling the Cisco IOS Software Image Reload, page 9](#) (optional)

### Configuring the SSL Certificate for a Cisco Download

Perform this task to configure the SSL certificate for a Cisco download.

#### Prerequisites

The SSL certificate must be configured to download from [cisco.com](http://cisco.com). The certificate is required for secure HTTP communication. You can obtain the SSL certificate from the Cisco website to configure it on the router.

Perform the following task to obtain the SSL certificate from the Cisco website:

1. Pull down the Tools menu in Internet Explorer (IE) and select Internet Options.
2. Under the Advanced tab, select “Warn if changing between secure and not secure mode.”
3. Enter the URL: <https://www.cisco.com> in IE. When a security alert pop-up box appears, click “No” for the question “You are about to leave a secure Internet connection. Do you want to continue?”.
4. Double-click the lock icon on the status bar of IE.
5. Select the Details tab of the certificate window displayed.
6. Save the certificate in the Base-64 encoded format to a file (such as `cisco.cert`).
7. Open the `cisco.cert` file in a Notepad to get the certificate data that you need to configure on your router.

## SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **crypto pki trustpoint *name***
4. **enrollment terminal**
5. **revocation-check none**
6. **exit**
7. **crypto ca authenticate *name***

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>enable</b>  <b>Example:</b> Router> enable	Enables privileged EXEC mode.  • Enter your password if prompted.
Step 2	<b>configure terminal</b>  <b>Example:</b> Router# configure terminal	Enters global configuration mode.
Step 3	<b>crypto pki trustpoint name</b>  <b>Example:</b> Router(config)# crypto pki trustpoint cisco_ssl_cert	Declares the certification authority (CA) and enters ca-trustpoint configuration mode.
Step 4	<b>enrollment terminal</b>  <b>Example:</b> Router(ca-trustpoint)# enrollment terminal	Displays the certificate request on the console terminal and allows you to enter the issued certificate data on the terminal.
Step 5	<b>revocation-check none</b>  <b>Example:</b> Router(ca-trustpoint)# revocation-check none	Specifies that certificate checking is not required.
Step 6	<b>exit</b>  <b>Example:</b> Router(ca-trustpoint)# exit	Exits ca-trustpoint configuration mode and returns to global configuration mode.
Step 7	<b>crypto ca authenticate name</b>  <b>Example:</b> Router(config)# crypto ca authenticate cisco_ssl_cert	Authenticates the CA to your router by obtaining the self-signed certificate of the CA.

## Configuring the Cisco IOS Auto-Upgrade Manager

Perform this task to configure the Cisco IOS Auto-Upgrade Manager:

## SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **autoupgrade disk-cleanup [crashinfo | core | image | irrecoverable]**
4. **autoupgrade ida url url**
5. **autoupgrade status email email-address smtp-server**

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><code>enable</code></p> <p><b>Example:</b> Router&gt; enable</p>	<p>Enables privileged EXEC mode.</p> <ul style="list-style-type: none"> <li>Enter your password if prompted.</li> </ul>
Step 2	<p><code>configure terminal</code></p> <p><b>Example:</b> Router# configure terminal</p>	<p>Enters global configuration mode.</p>
Step 3	<p><code>autoupgrade disk-cleanup [crashinfo   core   image   irrecoverable]</code></p> <p><b>Example:</b> Router(config)# autoupgrade disk-cleanup crashinfo</p>	<p>Configures the Cisco IOS Auto-Upgrade Manager disk cleanup utility.</p>
Step 4	<p><code>autoupgrade ida url url</code></p> <p><b>Example:</b> Router(config)# autoupgrade ida url https://www.cisco.com/cgi-bin/new-ida/locator/locator.pl</p>	<p>Configures the URL of the Cisco server running on www.cisco.com where the image download requests will be sent by Cisco IOS Auto-Upgrade Manager.</p> <p><b>Note</b> This step is required only if the default URL has changed.</p>
Step 5	<p><code>autoupgrade status email email-address smtp-server</code></p> <p><b>Example:</b> Router(config)# autoupgrade status email smtp-server smtpserver.abc.com</p>	<p>Configures the email address and outgoing email server to which the router sends the status email.</p>

## Downloading the Cisco IOS Software Image

Perform this task to download the Cisco IOS software image from the Cisco website (www.cisco.com) or from a non-Cisco server.

## SUMMARY STEPS

- enable
- upgrade automatic getversion

**DETAILED STEPS**

	Command or Action	Purpose
Step 1	<b>enable</b>  <b>Example:</b> Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>Enter your password if prompted.</li> </ul>
Step 2	<b>upgrade automatic getversion</b>  <b>Example:</b> Router# upgrade automatic getversion	Downloads the image directly from www.cisco.com or a non-Cisco server.

**Reloading the Router with the New Cisco IOS software Image**

Perform this task to reload the router with the new Cisco IOS software image.

**SUMMARY STEPS**

1. **enable**
2. **upgrade automatic runversion**
3. **exit**

**DETAILED STEPS**

	Command or Action	Purpose
Step 1	<b>enable</b>  <b>Example:</b> Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>Enter your password if prompted.</li> </ul>
Step 2	<b>upgrade automatic runversion</b>  <b>Example:</b> Router# upgrade automatic runversion	Reloads the router with the new image. <p><b>Note</b> You can also use the <b>upgrade automatic getversion</b> command to reload the router with the new Cisco IOS software image. But, if you have already downloaded the Cisco IOS software image using the <b>upgrade automatic getversion</b> command, you must use the <b>upgrade automatic runversion</b> command to reload the router.</p>
Step 3	<b>exit</b>  <b>Example:</b> Router# exit	Exits privileged EXEC mode.

**Canceling the Cisco IOS Software Image Reload**

Perform this task to cancel a scheduled reload of a specific Cisco IOS software image.

You can cancel an image reload under the following conditions:

- When the scheduled time to reload the router is not sufficient.
- When you do not want to upgrade the router to the new image.

## SUMMARY STEPS

1. **enable**
2. **upgrade automatic abortversion**
3. **exit**

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>enable</b>  <b>Example:</b> Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
Step 2	<b>upgrade automatic abortversion</b>  <b>Example:</b> Router# upgrade automatic abortversion	Cancels the Cisco IOS software image upgrade.
Step 3	<b>exit</b>  <b>Example:</b> Router# exit	Exits privileged EXEC mode.

# Configuration Examples for Cisco IOS Auto-Upgrade Manager

This section provides the following configuration examples:

- [Configuring the DNS Server IP Address: Example, page 10](#)
- [Configuring the SSL Certificate for a Cisco Download: Example, page 11](#)
- [Configuring the Cisco IOS Auto-Upgrade Manager: Example, page 11](#)

## Configuring the DNS Server IP Address: Example

You should configure the DNS server IP address on the router before configuring the Cisco IOS Auto-Upgrade Manager. This sequence of events enables the router to use the ping command with a hostname rather than an IP address. You can successfully ping the Cisco website (www.cisco.com) after configuring the DNS server IP address on the router. This action also ensures that the router is connected to the Internet.

The following example shows how to configure the DNS server IP address on your router. After configuring the DNS server IP address, you should be able to ping www.cisco.com successfully.

```
ip domain name mycompany.com
ip name-server 10.2.203.1
```

```
end
ping www.cisco.com
```

## Configuring the SSL Certificate for a Cisco Download: Example

You should configure the SSL certificate of the Cisco server on the router on the router before using the Cisco IOS Auto-Upgrade Manager to download an image from Cisco.

The following example shows how to configure the SSL certificate:

```
configure Terminal
crypto pki trustpoint cisco_ssl_cert
  enrollment terminal
  revocation-check none
exit
crypto ca authenticate cisco_ssl_cert

!Enter the base 64 encoded CA certificate and end this with a blank line or the word quit.
!The console waits for the user input. Paste the SSL certificate text and press Return.
-----BEGIN CERTIFICATE-----

<The content of the certificate>

-----END CERTIFICATE-----

!Trustpoint 'cisco_ssl_cert' is a subordinate CA and holds a non self signed cert
!Trustpoint 'cisco_ssl_cert' is a subordinate CA.
!but certificate is not a CA certificate.
!Manual verification required
!Certificate has the following attributes:
  ! Fingerprint MD5: 49CE9018 C0CC41BA 1D2FBEA7 AD3011EF
  ! Fingerprint SHA1: A88EAA5D 73D63CB7 BF25197B 9C35ED97 023BB57B

% Do you accept this certificate? [yes/no]: yes
Trustpoint CA certificate accepted.
% Certificate successfully imported
```

## Configuring the Cisco IOS Auto-Upgrade Manager: Example

The following example shows how to configure the Cisco IOS Auto-Upgrade Manager on the router:

```
configure terminal
autoupgrade disk-cleanup crashinfo
autoupgrade ida url https://www.cisco.com/cgi-bin/new-ida/locator/locator.pl
autoupgrade status status email smtp-server
```

## Additional References

The following sections provide references related to the Cisco IOS Auto-Upgrade Manager.

## Related Documents

Related Topic	Document Title
Cisco IOS Auto-Upgrade Manager commands: complete command syntax, command modes, command history, defaults, usage guidelines, and examples.	<a href="#">Cisco IOS Configuration Fundamentals Command Reference</a> , Release 12.4T
Configuring DNS on Cisco routers	<a href="#">Configuring DNS on Cisco Routers</a> , Release 12.2
Warm Upgrade	<a href="#">Warm Upgrade</a> feature module, Release 12.3(11) T

## Standards

Standard	Title
None	—

## MIBs

MIB	MIBs Link
None	To locate and download MIBs for selected platforms, Cisco IOS releases, and feature sets, use Cisco MIB Locator found at the following URL: <a href="http://www.cisco.com/go/mibs">http://www.cisco.com/go/mibs</a>

## RFCs

RFC	Title
None	—

## Technical Assistance

Description	Link
<p>The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.</p> <p>To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.</p> <p>Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.</p>	<a href="http://www.cisco.com/techsupport">http://www.cisco.com/techsupport</a>

# Feature Information for Cisco IOS Auto-Upgrade Manager

Table 1 lists the features in this module and provides links to specific configuration information. Only features that were introduced or modified in Cisco IOS Release 12.4(15)T or a later release appear in the table.

Not all commands may be available in your Cisco IOS software release. For release information about a specific command, see the command reference documentation.

Use Cisco Feature Navigator to find information about platform support and software image support. Cisco Feature Navigator enables you to determine which Cisco IOS and Catalyst OS software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to <http://www.cisco.com/go/cfn>. An account on Cisco.com is not required.



## Note

Table 1 lists only the Cisco IOS software release that introduced support for a given feature in a given Cisco IOS software release train. Unless noted otherwise, subsequent releases of that Cisco IOS software release train also support that feature.

**Table 1** Feature Information for Cisco IOS Auto-Upgrade Manager

Feature Name	Releases	Feature Information
Cisco IOS Auto-Upgrade Manager	12.4(15)T	<p>The Cisco IOS Auto-Upgrade Manager simplifies the software image upgrade process by providing a simple interface to specify, download, and upgrade a new Cisco IOS image.</p> <p>In 12.4(15)T, this feature was introduced on the Cisco 1800, Cisco 2800, and Cisco 3800 series routers.</p> <p>The following commands were introduced by this feature:</p> <ul style="list-style-type: none"> <li>• <b>autoupgrade disk-cleanup</b></li> <li>• <b>autoupgrade ida url</b></li> <li>• <b>autoupgrade status email</b></li> <li>• <b>debug autoupgrade</b></li> <li>• <b>show autoupgrade configuration unknown</b></li> <li>• <b>upgrade automatic abortversion</b></li> <li>• <b>upgrade automatic getversion</b></li> <li>• <b>upgrade automatic runversion</b></li> </ul>

# Glossary

**CLI**—command-line interface

**IDA or Cisco server**—Intelligent Download Application

**Cisco IOS**—Cisco Internetworking Operating System

---

CCVP, the Cisco logo, and Welcome to the Human Network are trademarks of Cisco Systems, Inc.; Changing the Way We Work, Live, Play, and Learn is a service mark of Cisco Systems, Inc.; and Access Registrar, Aironet, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Enterprise/Solver, EtherChannel, EtherFast, EtherSwitch, Fast Step, Follow Me Browsing, FormShare, GigaDrive, HomeLink, Internet Quotient, IOS, iPhone, IP/TV, iQ Expertise, the iQ logo, iQ Net Readiness Scorecard, iQuick Study, LightStream, Linksys, MeetingPlace, MGX, Networkers, Networking Academy, Network Registrar, PIX, ProConnect, ScriptShare, SMARTnet, StackWise, The Fastest Way to Increase Your Internet Quotient, and TransPath are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or Website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0711R)

Any Internet Protocol (IP) addresses used in this document are not intended to be actual addresses. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses in illustrative content is unintentional and coincidental.

© 2007 Cisco Systems, Inc. All rights reserved.